GB

SCOTT®

RX12

MW/FM/LW PORTABLE RADIO

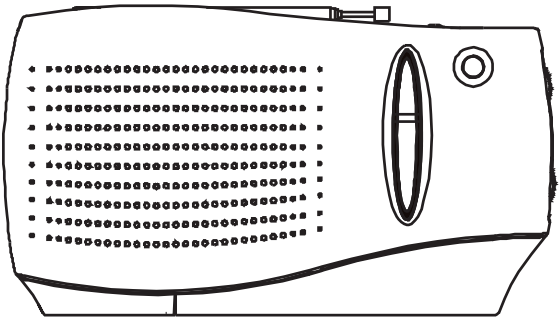

INSTRUCTION MANUAL

CE

ATTENTION

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION
To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING
To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT
DO NOT THROW BATTERIES IN FIRE !
THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING.

ENSURE A MINIMUM DISTANCE OF 5 CM AROUND THE APPARATUS FOR SUFFICIENT VENTILATION.

ENSURE THAT THE VENTILATION IS NOT IMPEDED BY COVERING THE VENTILATION OPENINGS WITH ITEMS, SUCH AS NEWSPAPERS, TABLE-CLOTHS, CURTAINS, ETC..

DO NOT PLACE NAKED FLAME SOURCES, SUCH AS LIGHTED CANDLES ON THE APPARATUS.

TAKE ATTENTION TO THE ENVIRONMENTAL ASPECTS OF BATTERY DISPOSAL.

USE THE APPARATUS ONLY IN MODERATE CLIMATES (NOT IN TROPICAL CLIMATES).

DO NOT EXPOSE THE APPARATUS TO DRIPPING OR SPLASHING.

DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE APPARATUS.

The mains plug shall remain readily operable.

In case of misfunction due to electrostatic discharge the apparatus has to be reset by disconnecting it from mains supply.

LOCATION OF CONTROLS

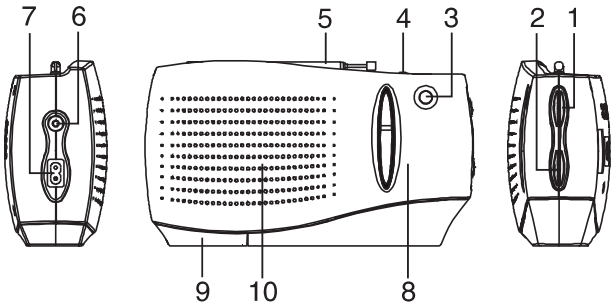

1. Tuning knob
2. Volume control and Power ON / OFF
3. Power indicator
4. Band Selector Switch
5. Telescopic antenna
6. Phone jack
7. AC socket
8. Dial scale
9. Battery compartment
10. Speaker

POWER SUPPLY

AC POWER OPERATION

1. Before operating, please check carefully that the voltage as indicated on your set corresponds to the voltage of your local area.
2. Insert the AC power cord into a convenient standard AC outlet.

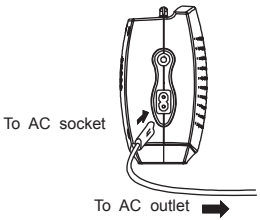

USING BATTERIES

Insert 3 pieces of C size batteries into the battery compartment at the bottom of the unit .
Make sure the batteries are connected with the correct polarity.

USING THE RADIO

1. Switch on the set by rotating the Volume control and Power ON / OFF knob counter clockwise.
2. Turn the tuning knob until the desired station is heard.
3. To turn off the radio, rotate the VOLUME control and power ON/OFF knob clockwise until a slight click is heard.
4. Select either MW, FM or LW band with the band selector switch.

PHONE JACK

For private listening connect an earphone or headphone with a 3.5 mm plug to the phone jack. The built -in speaker will be automatically disconnected.

TELESCOPIC ANTENNA

Extend the telescopic rod antenna to its full length, adjust the direction and angle for best FM reception.

SPECIFCATIONS

Frequency range :	MW 540 - 1600 kHz FM 87.5 - 108 MHz LW 150 - 280 kHz
Antenna :	FM : telescopic rod antenna LW/MW : Built - in ferrite bar antenna
Speaker :	3 inch 8 ohm dynamic speaker
Output power :	300 mW (10% THD)
Phone jack :	3.5 mm
Dimensions :	226 (L) x 70 (D) x 127 (H) mm
Power source :	AC : 230V ~ 50Hz DC : 4.5V 3 x UM 2 / SIZE " C "
Weight :	0.55 KGS

Where to place the item :
Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste.Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)